


# Assembly Guide for the STOWATRAY™ Stowable Adjustable Hitch-Mounted Cargo Carrier

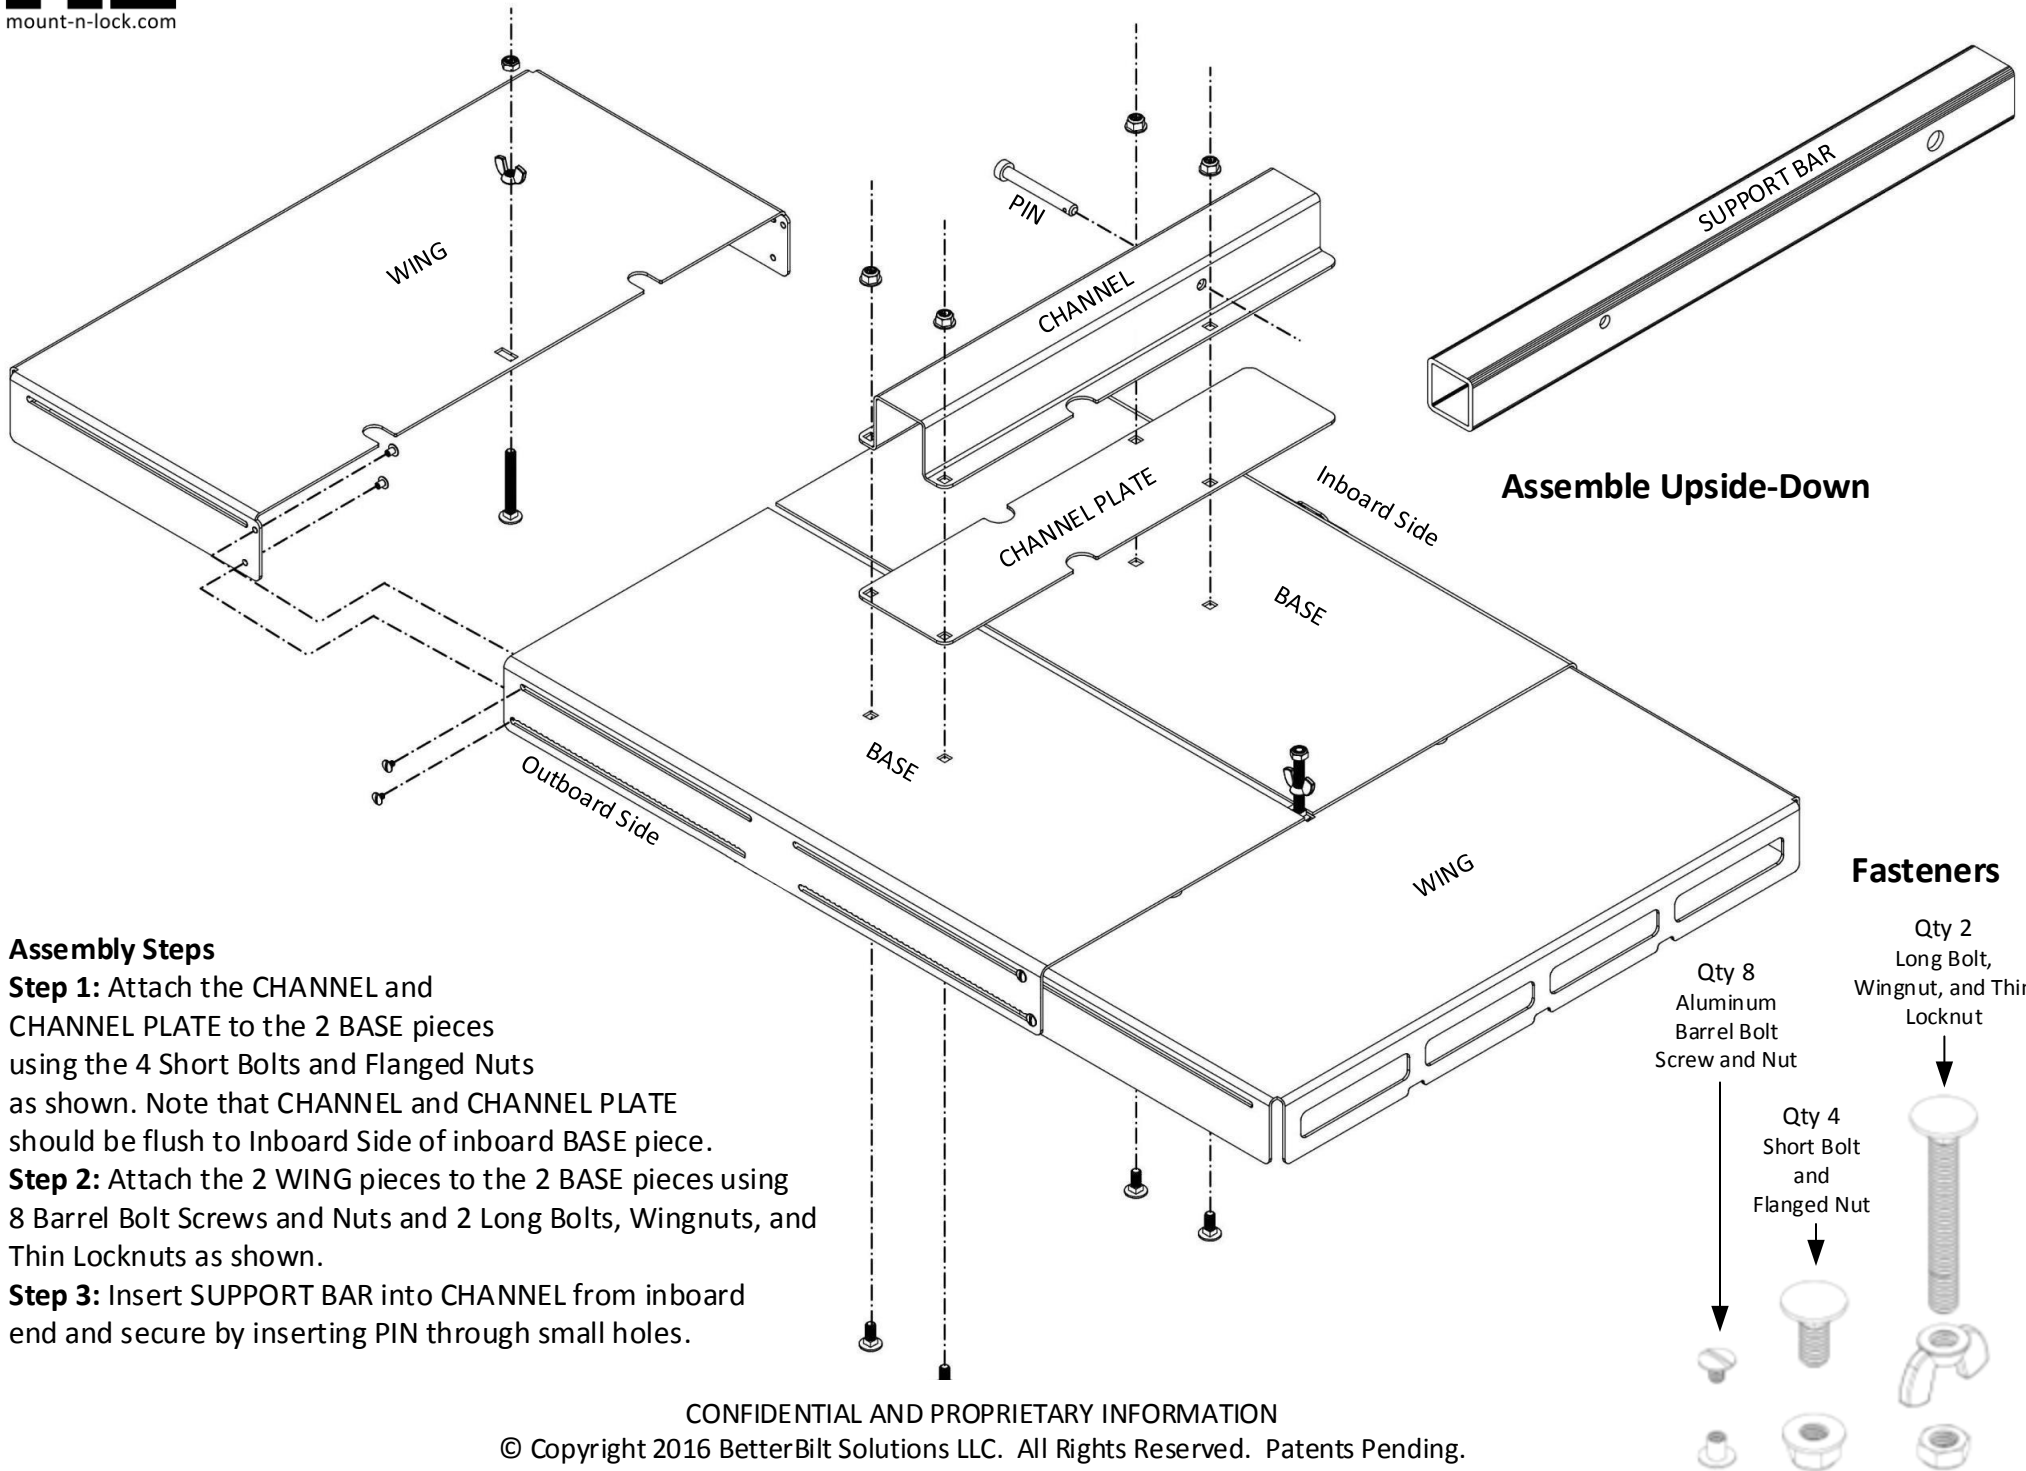

## Assembly Steps

**Step 1:** Attach the CHANNEL and CHANNEL PLATE to the 2 BASE pieces using the 4 Short Bolts and Flanged Nuts as shown. Note that CHANNEL and CHANNEL PLATE should be flush to Inboard Side of inboard BASE piece.

**Step 2:** Attach the 2 WING pieces to the 2 BASE pieces using 8 Barrel Bolt Screws and Nuts and 2 Long Bolts, Wingnuts, and Thin Locknuts as shown.

**Step 3:** Insert SUPPORT BAR into CHANNEL from inboard end and secure by inserting PIN through small holes.

CONFIDENTIAL AND PROPRIETARY INFORMATION

© Copyright 2016 BetterBilt Solutions LLC. All Rights Reserved. Patents Pending.